


RG710 Quick Start Manual

Overview



Keys	Introductions
Power key	<p>TURN ON - Hold down the on/off button until the “RugGear” symbol appears</p> <p>TURN OFF/RESTART – Hold down the on/off button to enter the phone mode menu, then select POWER OFF or RESTART</p> <p>STANDBY MODE - Short press on/off button to turn off/wake the screen</p>
Customizable key	<p>Long press to select shortcut app.</p> <p>Short press to enter the selected function.</p>
USB Port	Data cable jack, OTG cable jack
Associate MIC	Noise elimination.
Tips: key combination	To take a Screenshot : Press and hold both Volume Down and Power buttons together for 1 second

 
SIM card/Micro SD card installation and removal

 The device SIM card slot is only fit for the standard Micro SIM.

Note: Use of other size SIM cards will void warranty.

Please follow the steps mentioned below to install the memory card in the device:

1. Power off the phone
2. Open the screw lock according to the picture direction
3. Insert the SIM and SD card according to the picture (please note that the SD card needs to be inserted into the metal bracket first before closing).
4. Put back the back cover and lock the screw.

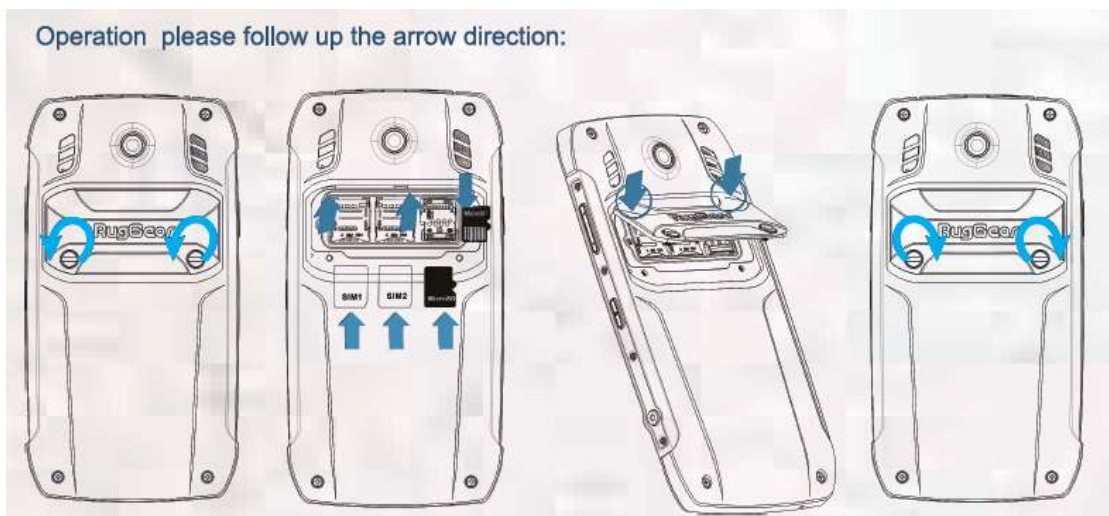

Note :

To avoid damage to your phone or loss of data, make sure that the phone has been turned off, and there is no power or phone connection before installing or removing the SIM card or Micro SD card.

·After installation is complete, be sure to tightly close the cover. Tighten the cover screws, to avoid water damage or dirt entering the mobile phone.

·Please try to use the phone's original data cable and adapter, or RugGear's approved data cable for the phone to charge ONLY.

Tips: Insert / Remove the memory card:

To store additional multimedia information, you must insert a memory card, the device can accept up to 64GB in the form of a Micro SD memory card.


Please make sure to remove the memory card in safe circumstances.

1. In standby mode, open the application list, then select Settings→Storage-unmount SD –OK
2. Remove the memory card.

Rugged outdoor features

- IP68 – will withstand being submerged under 2m of water for 30 mins
- Break-resistance – fully rugged, designed to withstand a fall of 1.2m onto concrete
- Dust-proof IP68 – highly resistant to dust and particles (please keep your device away from metal filings & swarf to avoid attraction & possible obstruction to the high powered magnetic speaker)
- Extreme temperatures and barometric pressures
- Resistant to chemical spillages and vibrations
- Dual Micro Sim
- Capacitive touch - for use with gloves

Please note that compliance with waterproof and dustproof requirements does not mean that your device will not be damaged by water under any conditions.

 **Cautions** : Please make sure the rear battery cover of the mobile phone, the screw lock, headphones and USB plug all rubber cover are tightly closed in order to have perfect dustproof and waterproof effect. Be sure to close the back cover (specific reference in front of the battery back cover installation method)

This mobile phones drop test conditions are as follows: 1.2 metres

To be waterproof and dustproof, please follow below step:

1. Please make sure the rear cover screw lock, headphones and USB plug and all rubber covers are tightly closed, in order to have perfect dustproof and waterproof effect. Be sure to close the battery cover (specific reference in front of the battery back cover installation method)
2. Do not immerse the phone in more than 2m of water.
3. Do not expose your phone in water dynamics such as waves or waterfalls.
4. Do not expose the equipment to salt water, ionized water or soapy water,
5. Do not use the phone in the spa or hot water because waterproof rubber is easily affected by high temperature.
6. Please do not use wet hands to open the battery cover. When you open it, you must put the

cover down in case water goes into the cover slot.

7. Do not immerse the phone in water or in extremely wet conditions when opening the back cover.
8. Do not open the battery cover while the body is not completely dry.
9. Do not use detergent cleaning products and other chemicals.
10. Rubber seal stoppers in the battery cover are an important part of the device. Please be careful to avoid damaging it when you open or close the battery cover. Also, make sure there is no debris, such as sand or dust on the rubber seal.
11. If the device is dropped or subjected to impact, the battery cover and multifunction jack cover may be loose. Ensure that all covers are properly aligned and tightly closed.
12. Under certain conditions, such as high volume levels, it may slightly vibrate. This is normal due to the waterproof design and does not affect the performance.
13. If you accidentally drop your phone in muddy conditions, just flush it with clean water and dry it.
14. If you accidentally drop your phone on the beach, just flush it with clean water and dry it.
15. If the device is immersed in water or wet microphone or speaker, during a call, the other party may not be able to hear your voice, so wipe with a dry cloth to make sure the microphone or speakers are clean and dry. Hair dryer is not permitted.
16. If water droplets are on the screen, it may affect the perception of the touch screen resulting in errors. We recommend drying the device before use.

Using reset key:

Because this phone has a built-in battery, if the phone cannot be turned off due to a screen freeze or phone fault etc, you can hold down the on/off button for 14 seconds to reset, so as to restart the phone on normal standby. Abnormal operating this button may result in loss of some unsaved data, please use the reset key with great caution.

Gloves mode:

Please check "Settings - Display- gloves mode selected" You can also use the touch screen while wearing gloves. Please make the fingers of gloves touch the phone's screen. The touch screen support wet hand operation, too.

Charging the battery


The first time you use your phone, please run out of power first, and then charge the battery until it is fully charged.



Please try to use the phone's original data cable and adapter, or RugGear approved data cable for the phone to charge. Unqualified charger or USB cable may **be** leads to the device explosion.




When the battery is low, the device will emit a warning tone and a low battery message

prompts. The battery icon  will appear blank. If the battery is too low, the phone will automatically shut down. Need to charge the battery in order to continue to use the phone. If the battery is completely discharged, even if the connection on the travel charger, cannot turn on the device. Before attempting to turn on the device, please charge a few minutes first.

Charging Travel Charger

1. Please open waterproof rubber plug according to the following right direction, before inserting the headset or data cable.



 The travel charger is not connected properly may result in serious damage to mobile phones. For any damage caused due to misuse, it is not within the warranty scope.

2. The Voltage instability will lead to the touch screen not in good working condition. The phone becomes warm while charging. It is normal, does not affect the service life or performance of the phone.

-  To save power, unplug the device when not in use travel charger.

 
5. Wireless charging devices

The device wireless charger function uses energy-saving control technology, and comprehensive identification of emission control technology, all functions by emitting part is completed. Before using the wireless charger function, read all safety precautions and this manual carefully to ensure safety and proper use.

1. This mobile phone built-in QI standard wireless charging receiver. This phone only supports QI Standard wireless charger.

2. Do not expose the wireless charger to rain or water.
3. Do not disassemble, modify or repair phone by yourself.
4. Do not store the device in water heaters, microwave ovens, hot cooking equipment or near the high pressure vessel.

Wireless charging photo:

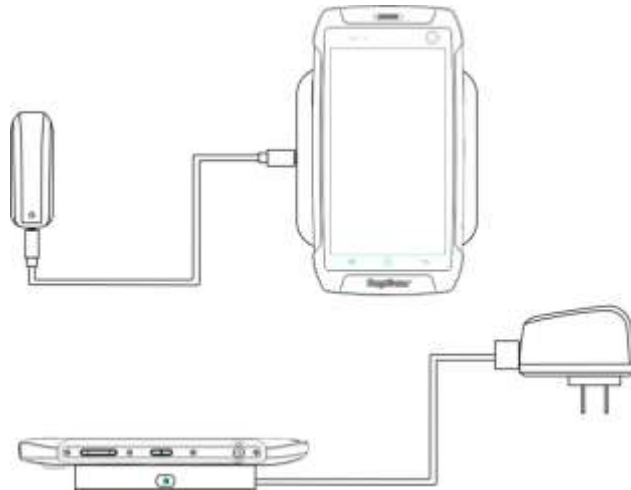

Extend battery life:

To save power, you can:

1. When not using Bluetooth, Wi-Fi or GPS, please close these wireless communication function;
2. Lowering the phone screen brightness and setting a shorter sleep time can save power. You can press the power button to turn off the screen when not using the device.
3. Closing Email, calendar and contacts, and other applications of automatic synchronization; Long pressing the HOME main menu button, selecting the icon and dragging left or right to slide to disappear;
4. Your installation and use of some of the applications may shorten battery life, please exit used applications or long press the menu button to view the used application list and slide left/right to exit.

Safety Information :

1. Specific Absorption Rate(SAR)

Your equipment radiation standard unit of measurement is known as specific absorption rate (SAR). In the ICNIRP, the SAR limit is 2.0 watts per kilogram (W/kg) every 10 grams of tissue on average. Using equipment accessories may result in different SAR values (SAR). The SAR may vary from reporting requirements, testing requirements and the network frequency in different countries or regions. The actual maximum of specific absorption rate of ear side and side of the head in this equipment of radio frequency electromagnetic field radiation used is less than 2.0 w/kg, in line with the area union CE and ROHS standards, conform to the requirements of the China national standard GB 2128-2128

To protect yourself and others from harm, please read all of the following information before using your mobile phone.

- Please use RugGear original profession adapters, chargers, accessories and supplies.
- Do not put the device in hot or cold places.
- Do not put the phone inside the heater, microwave, cooking equipment or high pressure vessel
- Do not touch the phone or charger when the phone is charging with wet hands.
- Do not use the phone in outdoor thunderstorm weather
- In a potentially explosive environment, gas station, etc., please turn off the phone.
- When using the phone at a restricted area, please observe all safety warnings and regulations.
- Please abide by all the relevant safety warnings and regulations of using mobile phones while driving
- Please turn off the phone while flying
- Do not use the phone in the occasion where is easily affected by radio frequency interference like hospitals and so on
- If possible, avoid the use of mobile phones within 15cm range from the pacemaker. The reason is the phone may interfere with pacemakers.
- If you must use the phone, please keep a distance of at least 15cm with pacemaker .Please use the phone at the other side of the body **or** opposite the pacemaker in order to reduce the interference with the pacemaker.
- If you use a hearing aid, please contact with the manufacturer about radio interference information.
- If you use other medical devices, please contact with the device manufacturer before using this medical device to determine whether the equipment will be affected by this phone emitted radio frequencies.
- Do not allow children or animals to bite, chew, or suck the phone or battery.
- Do not touch the multifunction jack and battery electrode with conductive elements of metal or liquids.
- Do not use the flash or lights when approaching human or animals eyes.
- Do not use high-volume to listen **to** long conversation or music, so as not to damage your hearing.
- Do not disassemble, modify or repair the phone.
Do not approach other handset manufacturers for any changes or modifications **or this** will void the warranty. For service, please contact with after-sales service department of RugGear or your local dealer.
- Only qualified service personnel can repair phones.
- **operating temperature: -20°C ~50°C**
- The product contains a re-charger battery, the charging voltage **4.3V**. The device contain a power adapter, charging temperature is **0°C ~+40°C**
- Caution risk of explosion if battery is replaced by an incorrect type. Dispose used batteries according to the instructions.
- Excessive sound pressure from earphones and headphones can cause hearing loss.



Disclaimer

All content and services available through this device belong to third parties and is protected by copyright, patent, trademark and other intellectual property laws, such content and services for personal, non-commercial use only. In the absence of obtaining license from content owner or service provider, you may not use any content or services.

In addition to the above limitations, unless expressly permitted by the application content or service providers, otherwise, any content or service this equipment displays, you may not modify, copy, republish, upload, post, transmit, translate, sell , create derivative works, exploit, or distribute in any way.

Third-party content and services as is available. Regardless, for any purpose, RugGear does not provide any express or implied warranties for the provided content or service. RugGear explicitly stated, does not undertake any implied warranty and terms or conditions accepted by laws and regulations Common law or in any other way including but not limited to the applicability of the merchantability or for a specific purpose

The third-party service may at any time to stop or interrupt, RugGear is not responsible for any period of time when the content or services is available. Content and services are transmitted by third parties through the network and transmission equipment outside the control of RugGear In addition to the generality of this exceptions clause, RugGear makes it clear that our company is not responsible for any interrupt and delay of any content or service applicable for this device.

RugGear involving content and services are neither responsible nor liable. Any content or services related services should be made directly by the content and service providers.